


Transparent Face Shield

SWS-FP1901



+ Features

Reference certificate	GuardRite/M-5002A
Material	HDPE
Suspension system	2 attachment points with ratchet adjustment
Sweatband	Soft sponge
Face protection	Transparent polycarbonate
Colors	 Yellow Black
Certifying organisation	Alienor Certification (Notified Body: 2754)
Certifications	CE EN 166:2002 (1B)
Sizes	Unique



+ Description

The SWS-FP1901 transparent protective visor is designed to protect the wearer's face against objects up to Ø 6mm at 120m/s. Ideal for continuous use, thanks to its transparent polycarbonate mask. Its excellent construction offers high comfort, thanks to its adjustment ratchet which allows it to adapt perfectly to the wearer's head. Its sweatband and superior ventilation system help to eliminate heat for prolonged use.

+ Activity Sectors



General Use



Industrial Maintenance



Agriculture and Gardening



Horticulture



Machinery and Equipment



Forest and Paper Industry



DIY & Crafts

+ Maintenance

Clean after each use to extend its lifespan. Sanitize the visor and its components using running water or neutral cleaning liquids. Dry cleaning is not recommended. Do not use paints, solvents, chemicals, adhesives, fuels or similar substances. Impact resistance and other protective properties may be compromised by these substances. The loss of these protective properties may not be apparent or readily detectable by the user.

Transparent Face Shield

SWS-FP1901



+ Pictogram Explanation



Acrylic protective visor



Roller for a perfect fit on the head



Soft band for sweat absorption



Adjustable visor angle



Open back for greater ventilation

+ References

 
Reference	Color	EU Size	Bar Code unit	Bar Code Box of 8 un	G.W. box of 8	N.W. box of 8	Box size (CxLxH)	Shipping box quantity	G.W.	N.W.	Shipping box size (CxLxH)	Bar Code shipping box
SWS-FP1901	Yellow Black	Unique	5600992409475	5600992410020	2,65 kg	2,36 kg	67x24x30 cm	4 boxes (32 uns)	11,60 kg	9,44 kg	70x50x63 cm	5600992410037

+ Mounting and Adjusting the Visor

Assemble the Protection Visor according to the instructions below


VISOR ANGLE ADJUSTMENT

There are 4 available angle positions (Img. 1) to adjust the distance between the eyes and the visor.

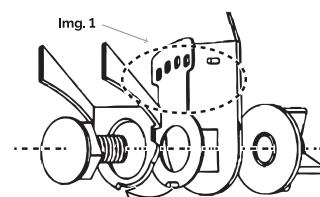

PLACEMENT OF VISOR

 1. Insert the central hole in the visor (Img. 2)
2. align it with the hole in the support (Img. 3)
3. Then insert the holes in the visor into the rotating "posts" of the support (Img. 4)
4. When they are all inserted, turn the "posts" to fix the visor (Img. 5)

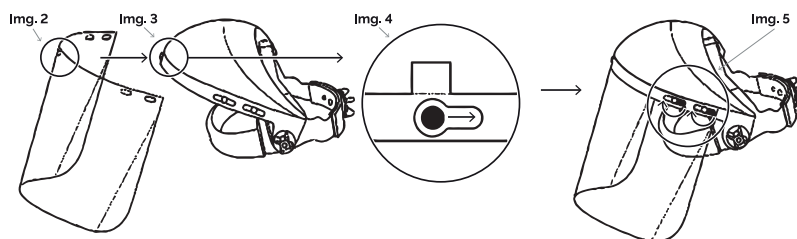

FITTING THE HARNESS TO THE HEAD

1. Push the adjustment roller (Img. 6) inwards
2. Without letting go of pushing, turn the roller to expand or contract the strap until the headgear adjusts to the head correctly (Img. 7)

